




VICTORY 4X4

3RD GEN TACOMA DITCH LIGHT MOUNTS

INSTALL INSTRUCTIONS

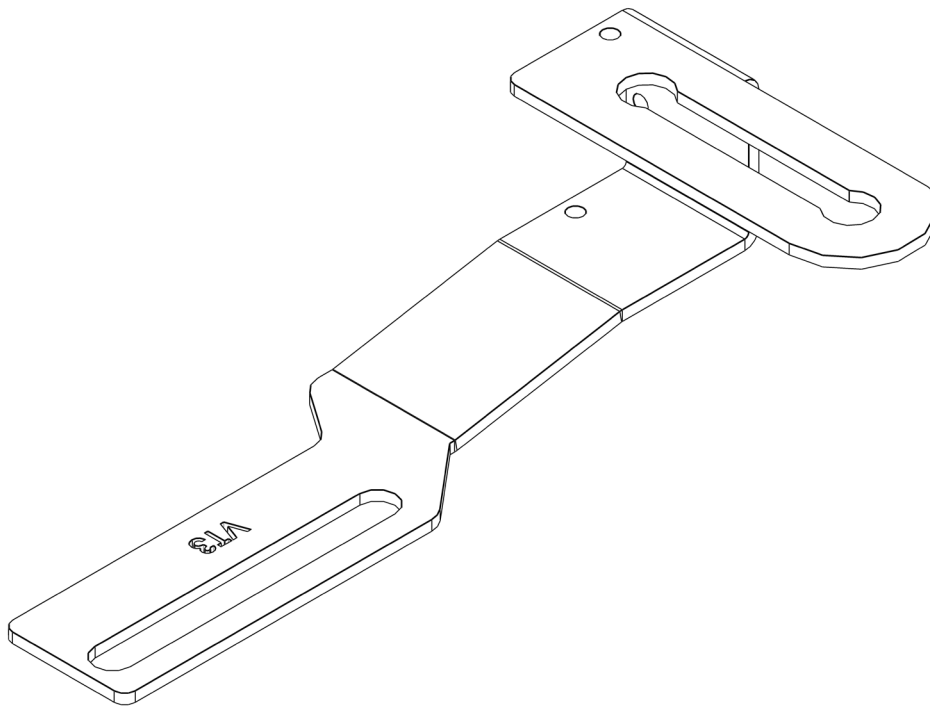

Please read the mounting instructions below carefully before attempting to install.

Be sure to check out the install video on the product page, if available.


Thank you for purchasing from Victory 4x4! Checkout our website, victory4x4.com for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-459-8447!

INCLUDED HARDWARE

N/A

INCLUDED PARTS

2x

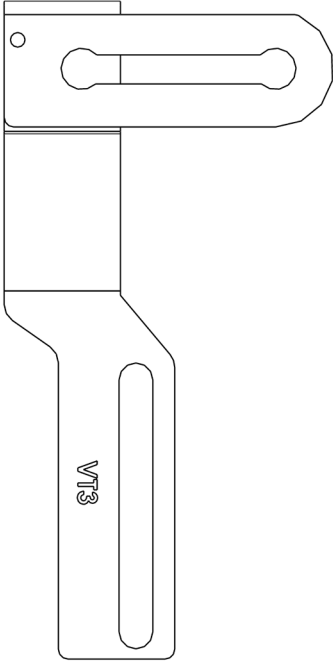

INSTALLATION

- 1.** Start by opening up your hood and remove the (2) factory hood bolts on either side of the vehicle using a 12mm socket. Be sure to support the hood once the bolts are out as it will be free and want to fall. Be sure to do one side at a time.



- 2.** Once the bolts are removed, take the supplied bracket and line the bolt holes on the hinge up with the vertical slot on the bracket and loosely thread the factory bolts back into the hood to secure the bracket. You may need to adjust the depth of where the bracket sits so it doesn't hit the windshield when you close the hood. You can carefully and slowly close your hood to verify, once you have the distance set, fully tighten down the bolts with a 12mm socket.

INSTALLATION

3. Once both brackets are installed and tight, you are now ready to add the lights of your choosing and wire them how you please. There are small holes cut out into the brackets to help route and clean up your wiring with zip ties.

